



WT-ST04-00IC is a lock manufactured for drawers and cabinets. Battery operated WT-ST04-00IC is operated with Mifare cards that come out of the box. Since it remains inside the drawer and cabinet, it is a hidden lock application.

1. Preparation for Installation

Press the RST for more than 2s. All information will be cleared and the lock will not be unlocked.

2. Low voltage

If you use a low voltage battery or the batteries you are using are about to run out, you will hear the other sound when you want to unlock it.

Under low voltage conditions, the lock will unlock automatically after about 20s in the locked state. After unlocking, it won't close the lock. When swiping the card again, it will sound "di di di..." prompt.


3. Battery installation


Insert three AAA alkaline batteries into the battery compartment in the correct direction. After being powered on, the electronic lock will sound and the green light will flash once.

4. Installation

Suitable thickness

Wood: 12-20mm

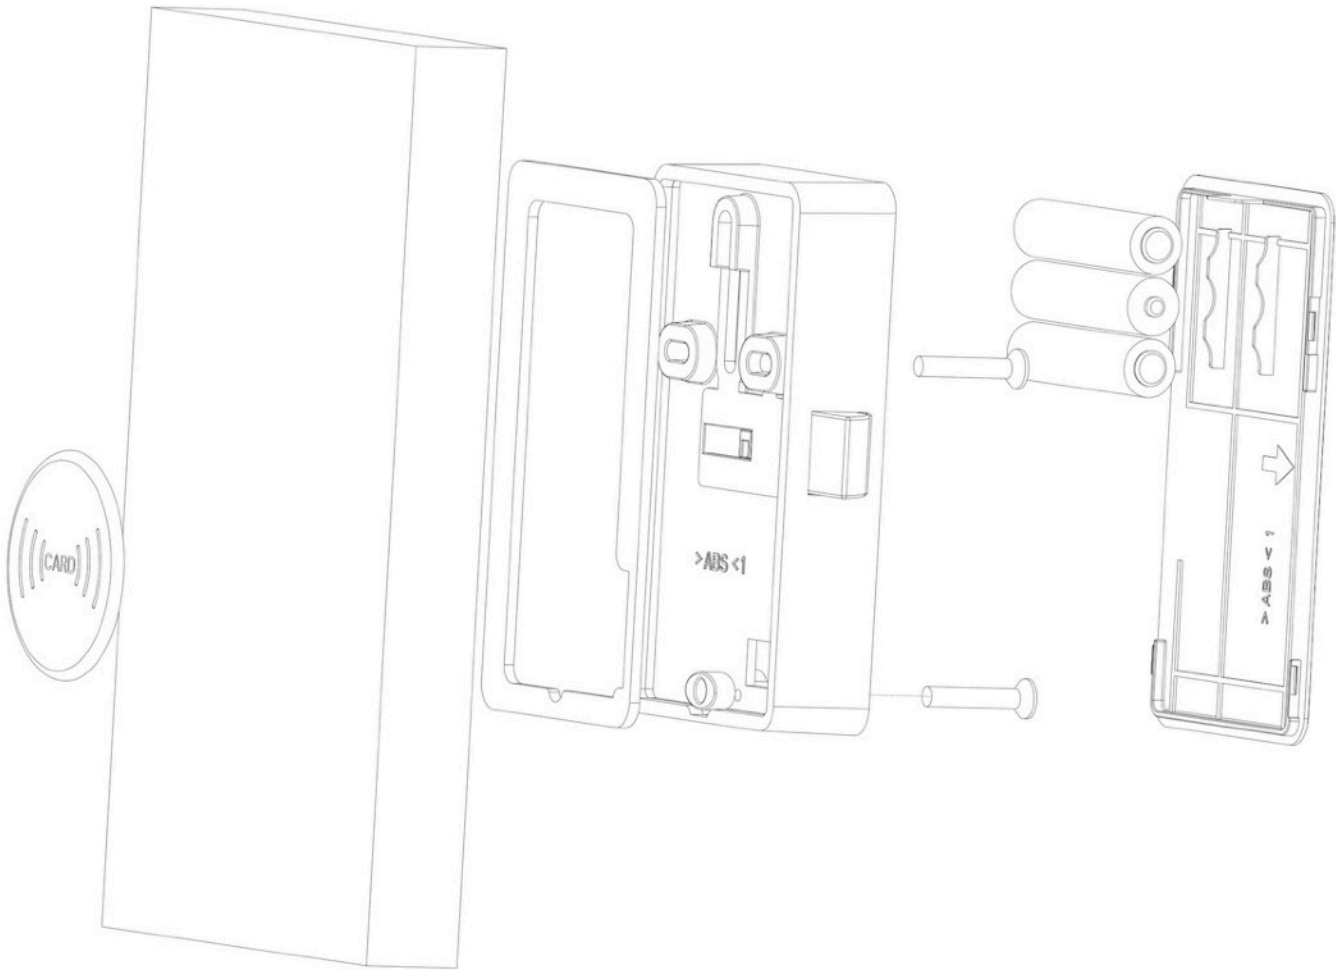

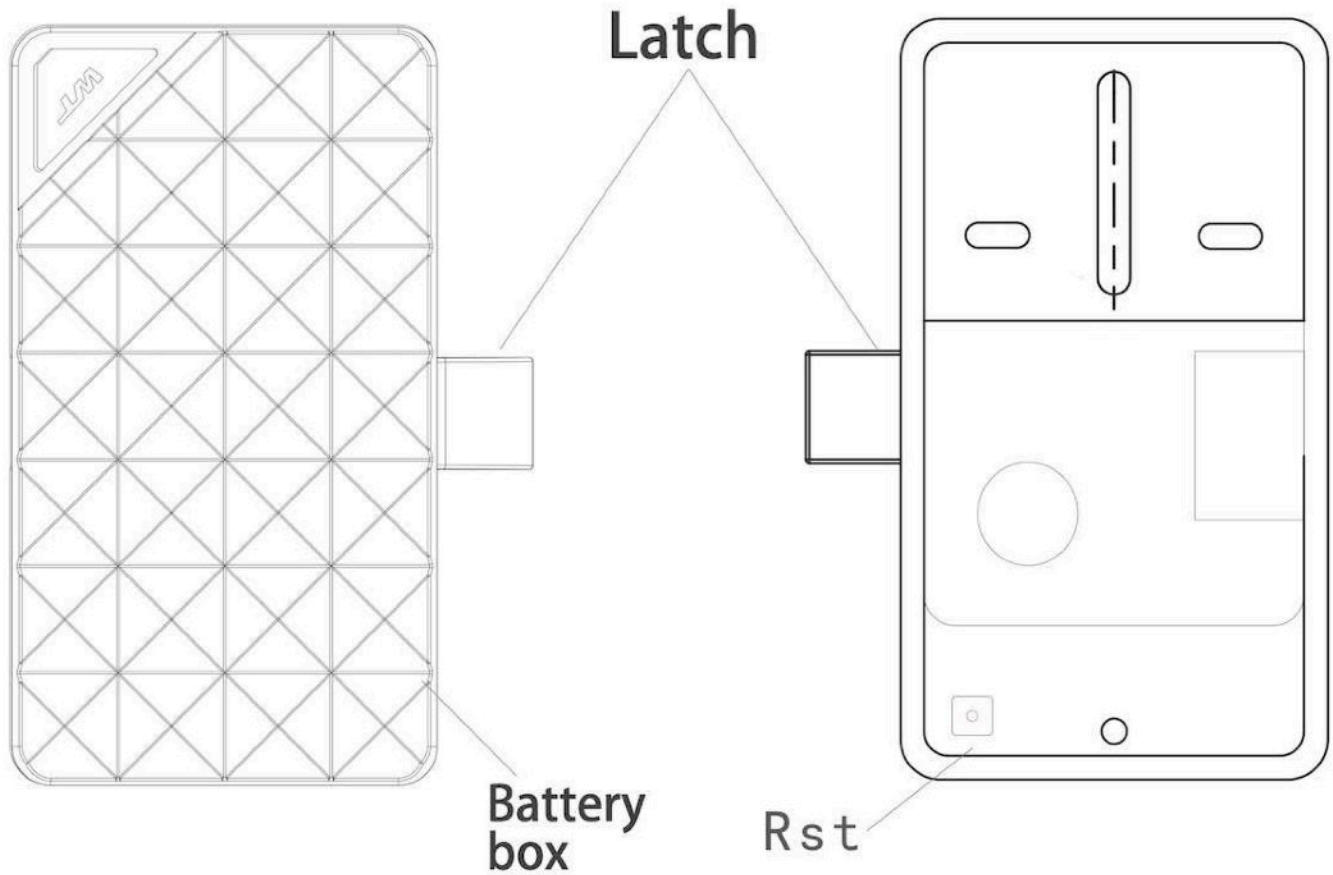

5. How to operate

LOCK & UNLOCK

Unlock

1. Bring your card close to where the lock is.
2. Buzzer gives out a long di sound.
3. The lock tongue will contract automatically within 3s to unlock
 1. "di di..." two sounds, invalid card
 2. Three di di di... sounds when unlocking, normal unlock. Under low voltage conditions, the lock will unlock automatically after about 20s in the locked state. After unlocking, it won't close the lock. When swiping the card again, it will sound "di di di..." prompt
 3. Note: The factory defaults to private mode

Lock

After 3s, the lock tongue extends out automatically to close the lock

Setting

Mode switch between public and private mode

1. Press the RST, cut off the power and then reconnect it;
2. Buzzer gives: a “di” sound means switch to private mode “di di di” sounds means switch to public mode.

All cards deleted after mode switched.

Private Mode Setting

Four types of cards: management card (only 1), main card (3 at most), service card (19 at most), guest card(only 1).

- ✱ Use management card 1 time to add the guest card, 2 times to add the service card, 3 times to add the main card, 4 times to unlock, 5 times to clear the information in the lock. (Retain the management card function)
 - ✱ Setting management card: The factory default card database is empty, the first card you use is the management card, once you heard the sound of di means setting succeed.
 - ✱ Management card have set & delete card, unlock function.
1. Single card opening: Use management card 1 time, after a di sound, take any other card to be added, this new card will be guest card. * If a new guest card be added, the previous guest card will be deleted automatically.
 2. Double card opening: Use management card 2 times, after two di di sounds, then take any other card(s) to be added, this new card will be service card. In this case, service card and guest card should be used together to unlock. * You can add 19 service cards at most in one time.
 3. How to add main card: Use management card 3 times, after three di di di sounds, then take any other card(s) to be added, this new card will be main card. * Main card opening is workable at both single and double card mode, you can add 3 main cards at most in one time.
 4. How to use the management card: Use management card 4 times, can unlock.
 5. How to delete all cards: Use management card 5 times, clear the information in the lock. (Retain the management card function)

Public Mode Setting

Types of cards: Management card (3 at most), temporary user card (only 1)1

1. Setting management card: Press the RST, a long di... sound, and the green light flash, then enter the management card (at most 3 cards).
 2. Setting temporary user card: When the management card is entered and the lock is unlocked, bring the card close to the sensing area and swipe it. With a di... sound, the lock tongue extends out and the setting is successful. (After the temporary card is set successfully, the green light will not flash. The temporary card can only be used once)
- ✱ The temporary user card will be deleted after using management card.

SECURITURK

Elektronik Güvenlik Sistemleri
D-100 Güney Yan Yol No:25 Lapis Han Ofis:
2069 Kartal, İstanbul / Türkiye
Telefon: +90 850 259 30 00
www.securitürk.com
www.elektronik-guvenlik.com