



Kısa tanıtım

 Kilit Açık Işığı (Yeşil)



WT-S2048-A0SF, Şifre girildikten veya parmak izini okuttuktan sonra kilit dilini içeri çekerek açılan bir kilittir. Kilit dili yaylı mekanizmaya sahiptir. Kilit açıldıktan 5 saniye sonra yeniden kilitli duruma geçer ve çekmece veya dolabın kapağı kapatılarak kilitleme işlemi tamamlanmış olur.

Kurulum

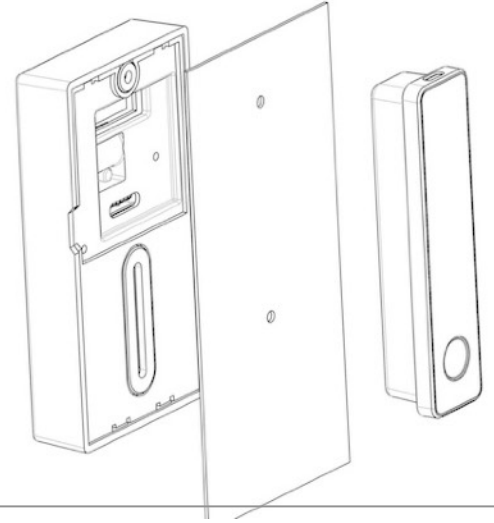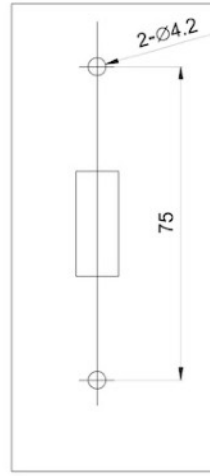

Teknik Bilgiler

Parmak İzi Algılayıcı	Yarı iletken parmak izi okuyucu	Bekleme Akımı	50µA
Yönetici Parmak İzi	2	Çalışma Akımı	120mA
Kullanıcı Parmak İzi	8	Çalışma Sıcaklığı	-20 ~ +55°C
Kullanılabilir Pil	4 x AA Pil	Çalışma Nem Aralığı	10% ~85%
Pil Ömrü	5000 Kez	Depolama Sıcaklığı	-40 ~ +55°C

 Kullandığınız pilin eski tarihli üretim olmasının varsayılan pil ömrünü etkileyebileceğini unutmayınız.

Nasıl Kullanılır

1) Varsayılanlar.

- Fabrikaca ayarlanmış varsayılan kullanıcı şifresi 1234
- Fabrikaca ayarlanmış varsayılan yönetici şifresi 4321
- Fabrikaca ayarlanmış varsayılan parmak izi veritabanı boş, kişiye özel modda herhangi bir parmak izi kilidi açabilir.

2) Parmak İzi Türleri

- Kilitte 2 tür parmak izi kullanılır: Yönetici parmak izi ve kullanıcı parmak izi.

3) Bu kilit 2 farklı modda kullanılabilir.

- Genele Açık Mod
- Kişiye Özel Mod

Genele açık modda yalnızca geçici şifre ayarlanabilir, geçici parmak izi ayarlanamaz. Fabrika varsayılan modu kişiye özel moddur.

Kullanım

1.Kilit Açma

Şifre ile Kullanım

* * * * + OK

- Fabrika varsayılan şifresi "1234 + OK" veya "4321+ OK" girildiğinde, sesli uyarı uzun bir ses çıkarır, yeşil ışık yanar.
- Kilit dili 3 saniye içinde otomatik olarak içeri çekilecek kilit açacaktır.

Parmak İzi ile Kullanım

- Parmak izinizi doğrulamak için kilit üzerinde yaklaşık 1 saniye boyunca tutun. Sesli uyarı uzun bir "di" sesi çıkarır, yeşil ışık yanar.
- Kilit dili 3 saniye içinde otomatik olarak içeri çekilecek kilit açacaktır.

2.Kilitleme

Kilit 5 saniye boyunca açık kaldıktan sonra, kilit dili otomatik olarak dışarı doğru çıkar ve kilitli hale gelir. Dolap veya çekmece kapağı kapatılarak kilitleme tamamlanmış olur.

Uyarılar

Buzzer di di di sesi çıkartıyor ve kırmızı ışık yanıyorsa, bu düşük voltaj anlamına gelir. Pilleri değiştirmelisiniz.

Yönetici şifresini kullanarak kilit açıldıktan sonra, kullanıcı şifresi 1234 olarak değişecektir.

3.Şifreleri Ayarlama

Varolan Şifreyi girin ve + OK tuşuna basın. Buzzer uzun bir di sesi verir ve kilit açık ışığı yanıp söner. Sonra yeni şifre tuşlanır ve OK tuşuna basılır. Şifre yeni şifre ile değiştirilmiş olur.

Örnek: Varolan 1234 kullanıcı şifresini tuşlayın OK tuşuna basın sonra yeni şifreyi 123123 olarak tuşlayın ve OK tuşuna basın. 1234 olan şifre 123123 olarak değişmiştir.

Notlar:

Varolan şifreleri değiştirirken aşağıdaki durumlara dikkat edin.

Yeni şifre 4-15 haneden oluşabilir, ana şifre kullanıcı şifresiyle aynı olamaz.

3 Kez "di...di...di..." sesi duyulursa, işlem hatalı demektir.

4. Parmak İzlerini Tanıtma

4.1. Yönetici parmak izi nasıl eklenir?

- Yönetici şifresini tuşlayın ve OK tuşuna basın
 - Sonra OK tuşuna uzunca basın, ışıklı uyarı yanıp sönmeye başlayacaktır. Sonra yönetici olarak atamak istediğiniz parmağı 3 kez okutun. Uzun bir Di sesi duyulacaktır. Yönetici parmak izi tanıtılmıştır.
 - Parmağı her okuttuğunuzda kısa bir Di sesi duyacaksınız. Bunun anlamı parmak izini okuduğu anlamına gelir.
 - 2. Yönetici parmak izini tanıtmak için yukarıdaki yöntemi tekrarlayın.
-

Yönetici parmak izi, kullanıcı parmak izi ekleme ve silme işlevine sahiptir.

Genele açık modda, yönetici parmak izi geçici parolayı da silebilir.

4.2. Kullanıcı parmak izi nasıl eklenir?

- Yönetici parmak izini kilide yaklaşık 1 saniye basılı tutun, yeşil ışık yanarken uzun bir "di" sesi duyacaksınız.
 - Yönetici parmak izini tekrar kilide yaklaşık 1 saniye basılı tutun, yeşil ışık yanıp sönerken uzun bir "di" sesi duyacaksınız. Artık kullanıcı parmak izi eklemeye hazırsınız.
 - Kullanıcı olarak atamak istediğiniz parmağı kilide 3 kez 1 saniye süre ile okutun. Doğru okumalarda her seferinde kısa bir "di" sesi duyarsınız. Bu parmak izinin okunduğu anlamına gelir. Üç kısa "di" sesi duyarsanız, bu okunmadığı anlamına gelir. Ardından parmak izini kilide tutabileceğiniz başka bir pozisyona değiştirin ve 3 kez daha okutun, uzun bir "di" sesi duyarsınız. Bu da başarılı olduğu anlamına gelir. (En fazla 8 adet kullanıcı parmak izi tanıtılabilir)
-

Genele açık modda kullanıcı parmak izi kullanılamaz.

Yönetici parmak izi ile kullanıcı parmak izi aynı olamaz.

5. Tüm Parmak İzlerini Silme

Yönetici parmak izini 3 kez okutun yeşil kilit açık ışığı yanıp sönecektir ve ardından 111 + OK tuşlayın. Uzun bir Di sesi duyacaksınız. Tüm parmak izleri silinmiştir.

Bu işlemi yönetici olmayan parmak izi ile yaparsanız o parmak izini silmiş olursunuz.

6. Genele Açık Moda Geçme

Yönetici şifresini tuşlayın ve ardından OK tuşuna basın. Sonra OK tuşuna uzun süre basın, Di sesi duyacaksınız ve ışık yanıp sönmeye başlayacaktır. Sonra OK + 44+ OK Tuşlayın. Kilit genele açık moda geçmiş olur.


6.1. Geçici Şifre ile Kullanma

Şifreyi tuşlayın ve OK tuşuna basın. Uzun bir Di sesi duarsnıpızı ve yeşil ışık yanar. Geçici şifre ayarlanmıştır.

Genele açık modda, geçici şifre girilmişse, geçici şifreyi temizlemek için yönetici şifresini veya yönetici parmak izini kullanın.

Geçici şifre yalnızca bir kez kullanılabilir.

Işığın her 3 saniyede bir yanıp sönmesi, kilide zaten bir geçici şifre atandığını gösterir.

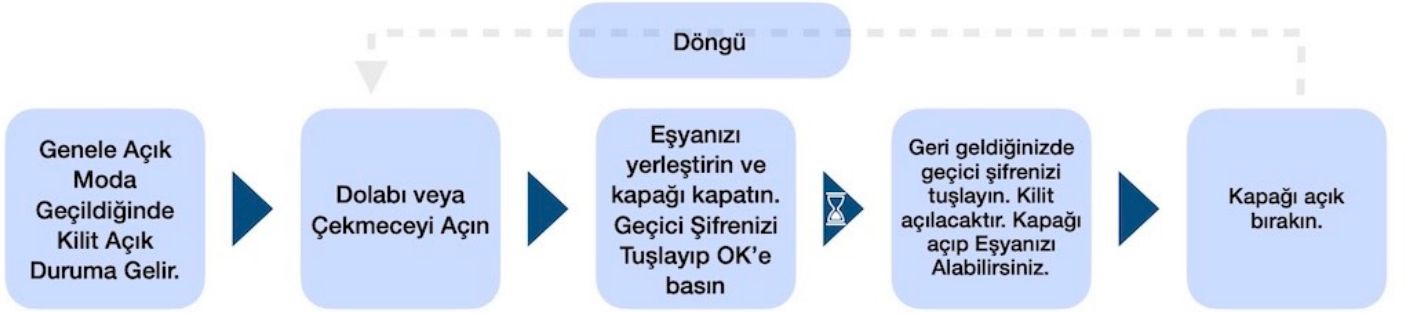


7. Genele Açık Modda İken Kişiyi Özel Moda Geçme

Yönetici şifresini tuşlayın ve ardından OK tuşuna basın. Sonra OK tuşuna uzun süre basın, Di sesi duyacaksınız ve ışık yanıp sönmeye başlayacaktır. Sonra OK + 43+ OK Tuşlayın. Kilit kişisel kullanım moduna geçmiş olur.



Short Introduction

 Unlock Light (Green)

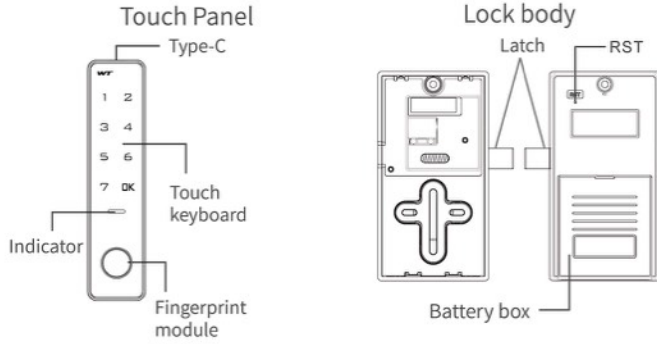

WT-S2048-A0SF is a lock that is unlocking by the lock tongue after entering the PIN or scanning the fingerprint. The lock tongue has a spring mechanism. 5 Seconds after unlocking, it is locked again and the door of the drawer or closet is closed and the locking process is completed.

Installation

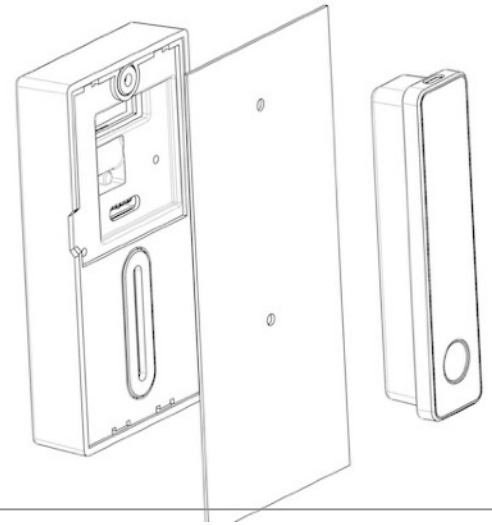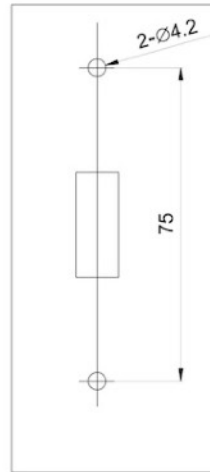

Technical Specifications

Fingerprint Sensor:	Semiconductor	Standby Current:	50µA.
Administrator Fingerprint:	2	Operating Curren	120mA
User Fingerprint:	8	Operating Temperature:	-20 to +55°C.
Usable Battery:	4 x AA Batteries.	Operating Humidity:	10% to 85%.
Battery Life:	5000 Times	Storage Temperature:	-40 to +55°C.
Please note that the older the battery, the more likely it is to affect the battery life.			

How to Use

1) Defaults.

- Factory-set default user PIN 1234
- Factory-set default administrator PIN 4321
- The factory-set default fingerprint database is empty, can unlock any fingerprint in private mode.

2) Types of Fingerprints

2 types of fingerprints are used in the lock: administrator fingerprint and user fingerprint.

3) This lock can be used in 2 different modes.

- Public Mode
- Private Mode

In public mode, only a temporary PIN can be set, a temporary fingerprint cannot be set. Factory default mode is private mode.

Usage

8.Unlock

Use with Password

* * * * + OK

1. When the factory default PIN "1234 + OK" or "4321+ OK" is entered, the audible warning will make a long sound, the green light turns on.
2. The lock tongue will open the lock to be automatically pulled in in 3 seconds.

Use with Fingerprint

1. Hold on the lock for about 1 second to verify your fingerprint. The sound warning makes a long "di" sound, the green light is on.
2. The lock tongue will open the lock to be automatically pulled in in 3 seconds.

9.Lock

After the lock stays open for 5 seconds, the lock tongue automatically pops out and becomes locked. The lock is complete by closing the cabinet cover or drawer.

Notes

If the buzzer makes a sound and the red light is on, it means low voltage. You must replace the batteries.

After unlocking using the administrator PIN, the user PIN will change to 1234.

10.Setting Passwords

Enter the existing PIN and press + OK. The buzzer gives a long di sound and the lock on light flashes.

Enter new PIN and then press OK. The PIN is replaced with the new PIN.

Example: Enter the existing 1234 user PIN, press the OK key, then press the new PIN to 123123 and press the OK key. The PIN with 1234 has been changed to 123123.

Notes:

Pay attention to the following situations when changing existing PINs.

The new PIN can consist of 4-15 digits, the master PIN cannot be the same as the user PIN.

If the sound of "di...di...di..." is heard 3 times, the operation is wrong.

11. Adding Fingerprints

11.1. How to add an administrator fingerprint?

- Enter the administrator PIN and press OK
 - Then long press the OK button, the light warning will start flashing. Then have the finger you want to assign as administrator read 3 times. A long Di sound will be heard. Administrator fingerprint introduced.
 - *Every time you read the finger, you will hear the short Di sound. This means that the lock reads the fingerprint correctly.*
 - 2. Repeat the method above to introduce the administrator fingerprint.
-

The administrator fingerprint has the function of adding and deleting user fingerprints.

In public mode, the administrator fingerprint can also delete the temporary PIN.

11.2. How to add user fingerprint?

1. The administrator fingerprint press and hold the on the lock for about 1 second, you will hear a long "di" sound when the green light is on.
 2. Hold the administrator fingerprint on the lock again for about 1 second, you will hear a long "di" sound as the green light flashes. Now you are ready to add user fingerprints.
 3. Read the finger you want to assign as a user to the lock 3 times for 1 second. In correct readings, you hear a short "di" sound every time. This means that the fingerprint is read. If you hear three short "di" sounds, it means it is not read. Then change the fingerprint to another position where you can hold in the lock and read it 3 more times, you will hear a long "di" sound. This means that it is successful. (A maximum of 8 user fingerprints can be introduced)
-

In public mode, user fingerprints are not available.

Administrator fingerprint and user fingerprint cannot be the same.

4. Delete All Fingerprints

Scan the administrator fingerprint 3 times, the green lock on light will flash and then press 111 + OK. You will hear for a long Di sound. All fingerprints have been removed.

If you do this with a non-administrator fingerprint, you will have deleted that fingerprint.

5. Switching to Public Mode

Enter the administrator PIN and then press OK. Then press the OK button for a long time, you will hear the Di sound and the light will start flashing. Then press OK + 44+ OK.
The lock will be in public mode.

5.1. Using with Temporary Password

Enter the PIN and press OK. A long Di sound and the green light is on. The temporary PIN has been set.

In public mode, if a temporary PIN is entered, use the administrator PIN or administrator fingerprint to clear the temporary PIN.

The temporary PIN can only be used once.



If the light flashes every 3 seconds, it indicates that a temporary PIN has already been assigned to the lock.

6. Switching to Private Mode While in Public Mode

Enter the administrator PIN and then press OK. Then press the OK button for a long time, you will hear the Di sound and the light will start flashing. Then press OK + 43+ OK.

The lock will switch to private use mode.

SECURITURK

Elektronik Güvenlik Sistemleri
D-100 Güney Yan Yol No:25 Lapis Han Ofis:
2069 Kartal, İstanbul / Türkiye
Telefon: +90 850 259 30 00
www.securitürk.com
www.elektronik-guvenlik.com